


Table of Contents

Table of Contents Page 1
 Approvals Page 1
 Attention Page 1
 Specification Page 2
 Locking Devices Page 2
 Mounting..... Page 3
 Attention: Mounting Handle on Side..... Page 3
 Never Remove Lever..... Page 3



Approvals

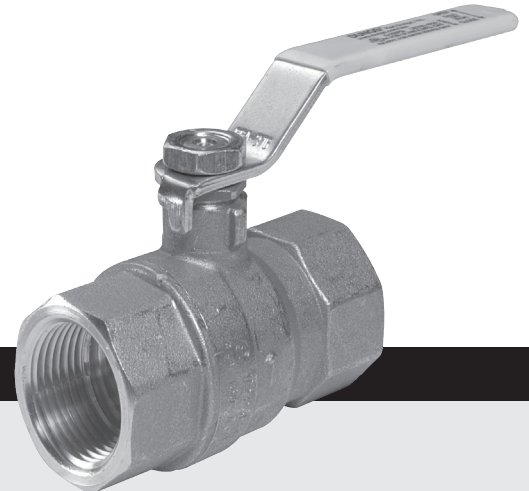

UL Listed:
File # MH18741



CSA Certified:
File # 209183



FM Approved:
File # 1B7A5.AH

Commonwealth of Massachusetts Approved Product Approval code G1-1107-35

Attention



The installation and maintenance of this product must be done under the supervision of an experienced and trained specialist. Never perform work if gas pressure or power is applied, or in the presence of an open flame.



On completion of installation on the ball valve, perform a leakage and function test.



Please read the instruction before installing or operating. Keep the instruction in a safe place. You find the instruction also at www.dungs.com If these instructions are not heeded, the result may be personal injury or damage to property.



This product is intended for installations covered by, but not limited to, the following codes and standards: NFPA 86, CSD-1, ANSI Z21.13, UL 795, NFPA 85, CSA B149.3, NFPA 37 and CSA B149.1.




Any adjustment and application-specific adjustment values must be made in accordance with the equipment manufacturers instructions.

Explanation of symbols


- 1, 2, 3 ... = Action
- = Instruction

Specification


KH Manually operated ball valve for gas piping carrying natural gas, propane, butane, air and inert gases.

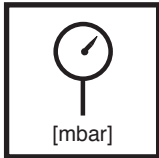


Factory Rated Max. Operating Pressure
125 PSI (4225 mbar)

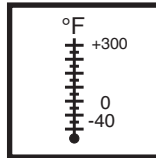

Ambient / Medium Temperature
-40 °F ... +300 °F
(-40 °C ... +150 °C)

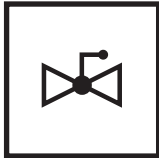

Classification of Valve for up to 2" NPT
UL 125 Subject 258 (125 PSI)
ANSI Z21.15; CSA 9.1 (0.5 PSI)
ANSI B16.33; CSA 3.16 (125 PSI)
CSA 3-88 and CGA CR91-002 (125 PSI)
ASME 16.44 (5 PSI)

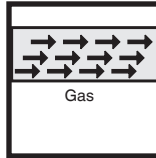

Gases
Natural gas, propane, butane & other noncorrosive gases
Materials in contact with Gas
Housing: Forged brass
Seals: PTFE O-rings; Viton
Ball: Chrome plated

Body size	Size	Order No.
KH 01/6-02	1/4" NPT	268443
KH 01/6-03	3/8" NPT	268444
KH 01/6-05	1/2" NPT	268445
KH 01/6-07	3/4" NPT	268446
KH 01/6-10	1" NPT	268447
KH 01/6-12	1 1/4" NPT	268449
KH 01/6-15	1 1/2" NPT	268451
KH 01/6-20	2" NPT	268452
KH 01/6-25	2 1/2" NPT	268453
KH 01/6-30	3" NPT	268454

Locking Devices


Locking devices are available for the KH series ball valves from 1/2" NT up to 2" NPT.

Description	Order No.
1/2" to 3/4"	269275
1" to 1 1/4"	267339
1 1/2" to 2"	269276

Mounting



Installation Position

Safety shutoff valve from vertically upright to horizontal.

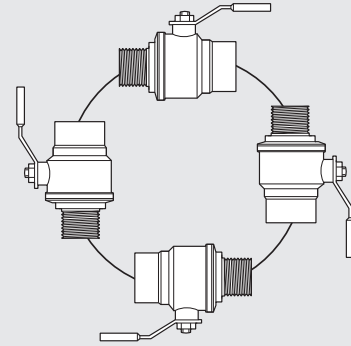

Recommended Piping Procedure

1. Examine the valve for shipping damage.
2. The main gas supply must be shut off before installation.
3. The inside of the valve, threads and piping all must be clean and free of dirt and debris. Failure to remove dirt/debris could result in valve damage or cause improper performance.
4. Use new, properly reamed and threaded pipe free of chips.
5. Apply good quality pipe sealant, putting a moderate amount on the male threads only. If pipe sealant lodges on the valve seat, it will prevent proper operation. If using LP gas, use pipe sealant rated for use with LP gas.
6. Do not thread pipe too far. Valve distortion and/or malfunction may result from excess pipe in the valve body.
7. Apply counter pressure only a parallel jaw wrench only to the flats on the flange when screwing the pipe into the flanges.
8. Do not overtighten the pipe. Follow the maximum torque values listed below.
9. After installation is complete, perform a leak test.


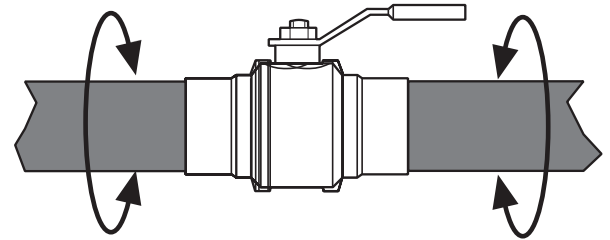


Recommended Torque for Piping	1/2"	3/4"	1"	1 1/4"	1 1/2"	2"	2 1/2"	3"	NPT pipe
		443	752	1106	1770	1991	2213	2876	3540



Attention: Mounting Handle on Side

If the ball valve is mounted so that the handle is on the side, as shown to the right, the handle must close the ball valve when actuated downwards as illustrated to the right.

! When installing a new ball valve 1" and larger, there is a large amount of torque require to actuate the ball valve first time because of the lack of lubrication on the ball itself. In order to actuate the valve, mount into a vice or on a gas train and turn the handle. Once actuated, the valve is now lubricated and easier to turn.

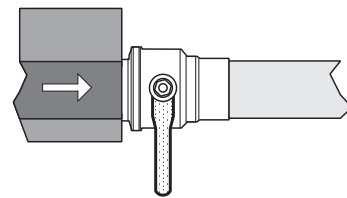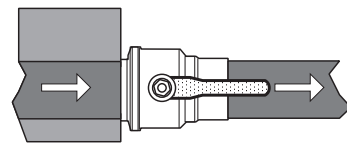

Never Remove Lever

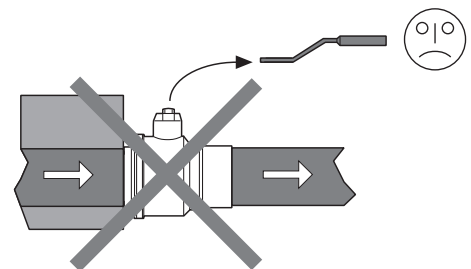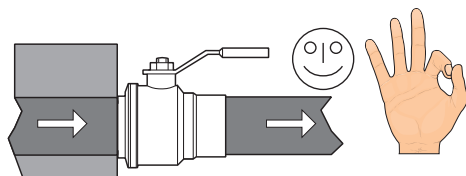

! Never permanently remove the handle from the ball valve.

We reserve the right to make modifications in the course of technical development.

Karl Dungs, Inc.
3890 Pheasant Ridge Drive NE
Suite 150
Blaine, MN 55449, U.S.A.
Phone 763 582-1700
Fax 763 582-1799
e-mail info@karldungsusa.com
Internet <http://www.dungs.com/usa/>

Karl Dungs GmbH & Co. KG
P.O. Box 12 29
D-73602 Schorndorf, Germany
Phone +49 (0)7181-804-0
Fax +49 (0)7181-804-166
e-mail info@dungs.com
Internet <http://www.dungs.com>